


Individual Circuit Fuse Box No. 1

S6RW0C910D004

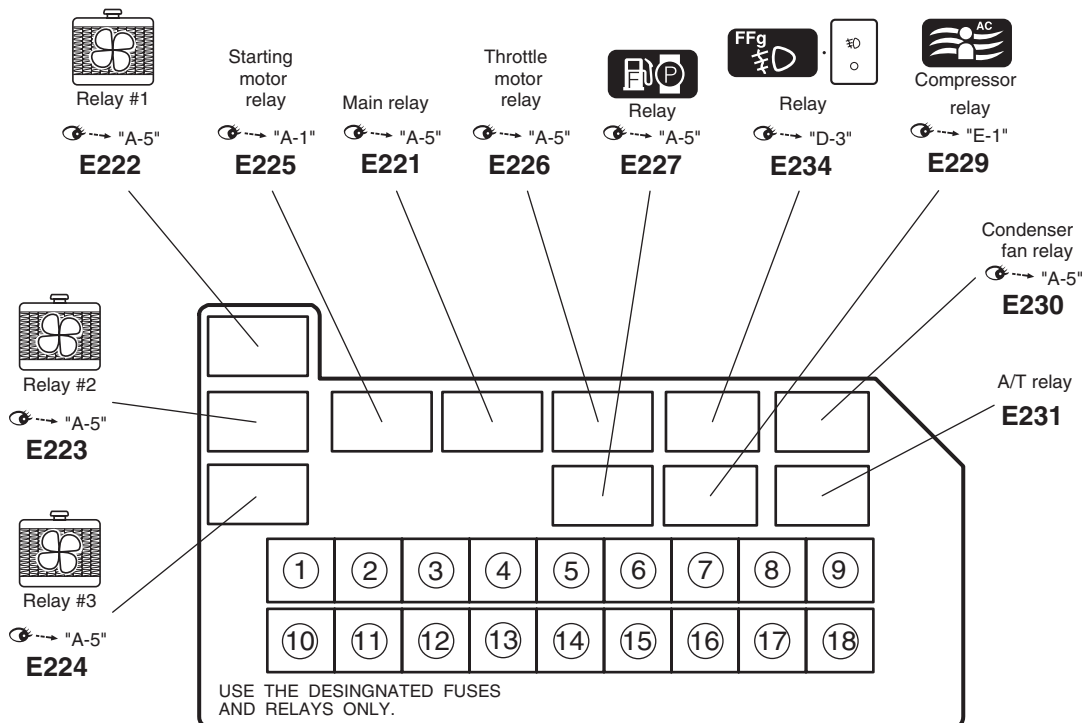


I6RW0C910A11-01

No.	Fuse	Description on the cover	Protected circuit
①	15 A	FI	Main relay
②	15 A	AT	A/T relay
③	15 A	THR MOT	Throttle motor relay
④	20 A	A/C	A/C compressor relay Condenser fan relay
⑤	BLANK	BLANK	BLANK
⑥	30 A	BLW	J/B
⑦	50 A	IGN	IG switch
⑧	30 A	ST	Starting motor relay
⑨	30 A	ABS SOL	ABS control module
⑩	30 A	RDTR	Radiator fan relay #1 Radiator fan relay #2 Radiator fan relay #3
⑪	40 A	ABS MOT	ABS control module
⑫	60 A	P/S	Power steering control module
⑬	BLANK	BLANK	BLANK
⑭	20 A	FR FOG	Front fog light relay
⑮	15 A	H/L L	Headlight (L) Headlight LO relay (L) Headlight HI relay (L)
⑯	15 A	H/L R	Headlight (R) Headlight LO relay (R) Headlight HI relay (R)
⑰	BLANK	BLANK	BLANK
⑱	BLANK	BLANK	BLANK

Individual Circuit Fuse Box No. 2 (In J/B (Except Taiwan))

S6RW0C910D009

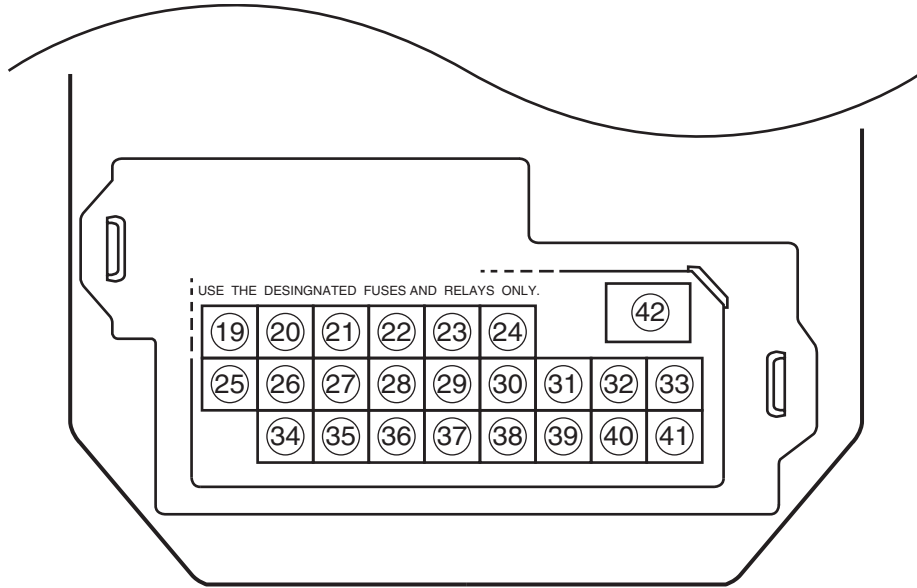

17RW01910912-02

No.	Fuse	Description on the cover	Protected circuit
①⑨	15 A	RR WIP	Rear wiper motor Rear washer motor
②⑩	15 A	IG COIL	A/F sensor Current sensor ECM Fuel pump relay Generator Heated oxygen sensor #1 Heated oxygen sensor #2 VSS ICM IG coil #1 IG coil #2 IG coil #3 IG coil #4
②①	10 A	BACK	Back-up light switch Fresh / Recircle actuator Mode control switch Auto A/C unit 4WD control module KLS ECM Transaxle range sensor Headlight beam leveling switch Headlight beam leveling actuator (R) Headlight beam leveling actuator (L)
②②	10 A	MTR	COMB meter Flasher relay
②③	15 A	ACC	BCM Power mirror switch ACC socket
②④	15 A	ACC 2	Rear ACC socket Audio Multi information display KLS ECM

No.	Fuse	Description on the cover	Protected circuit
②⑤	30 A	WIP	COMB switch
			Windshield washer motor
			Windshield wiper motor
			Rear wiper relay
			DRL controller
②⑥	10 A	IG1 SIG	Power steering control module
			A/T relay
			Brake light switch
②⑦	15 A	A/B	A/B SDM
②⑧	10 A	ABS	ABS control module
			G sensor
②⑨	10 A	TAIL	COMB switch
			DRL controller
③⑩	15 A	STOP	Brake light switch
③①	20 A	D/L	BCM
③②	15 A	4WD	4WD control module
③③	10 A	ST SIG	Starting motor relay
③④	15 A	S/H	Seat heater switch (Driver side)
			Seat heater switch (Passenger side)
③⑤	10 A	IG2 SIG	Blower fan relay
③⑥	15 A	RR FOG	COMB switch
③⑦	15 A	DOME	Audio
			BCM
			COMB meter
			DLC
			ECM
			Interior light
			ICM
			TCM
			Rear interior light
			Luggage compartment light
			Main switch (Key switch)
			Multi information display
			KLS ECM
			③⑧
Mirror motor (R)			
Mirror motor (L)			
③⑨	15 A	HORN-HAZ	Horn relay
			Flasher relay
④⑩	BLANK	BLANK	BLANK
④①	BLANK	BLANK	BLANK
④②	30 A	P/W	Power window main switch
			Front power window sub switch
			Rear power window sub switch (R)
			Rear power window sub switch (L)